




**BULLARD  
BOLLARDS**  
Think Bollard Think Bullard

INSTALLATION INSTRUCTION

# EYELIGHT FLAT COLLECTION


INSTALLATION TYPE:  
Surface Mounted Wall Luminaires

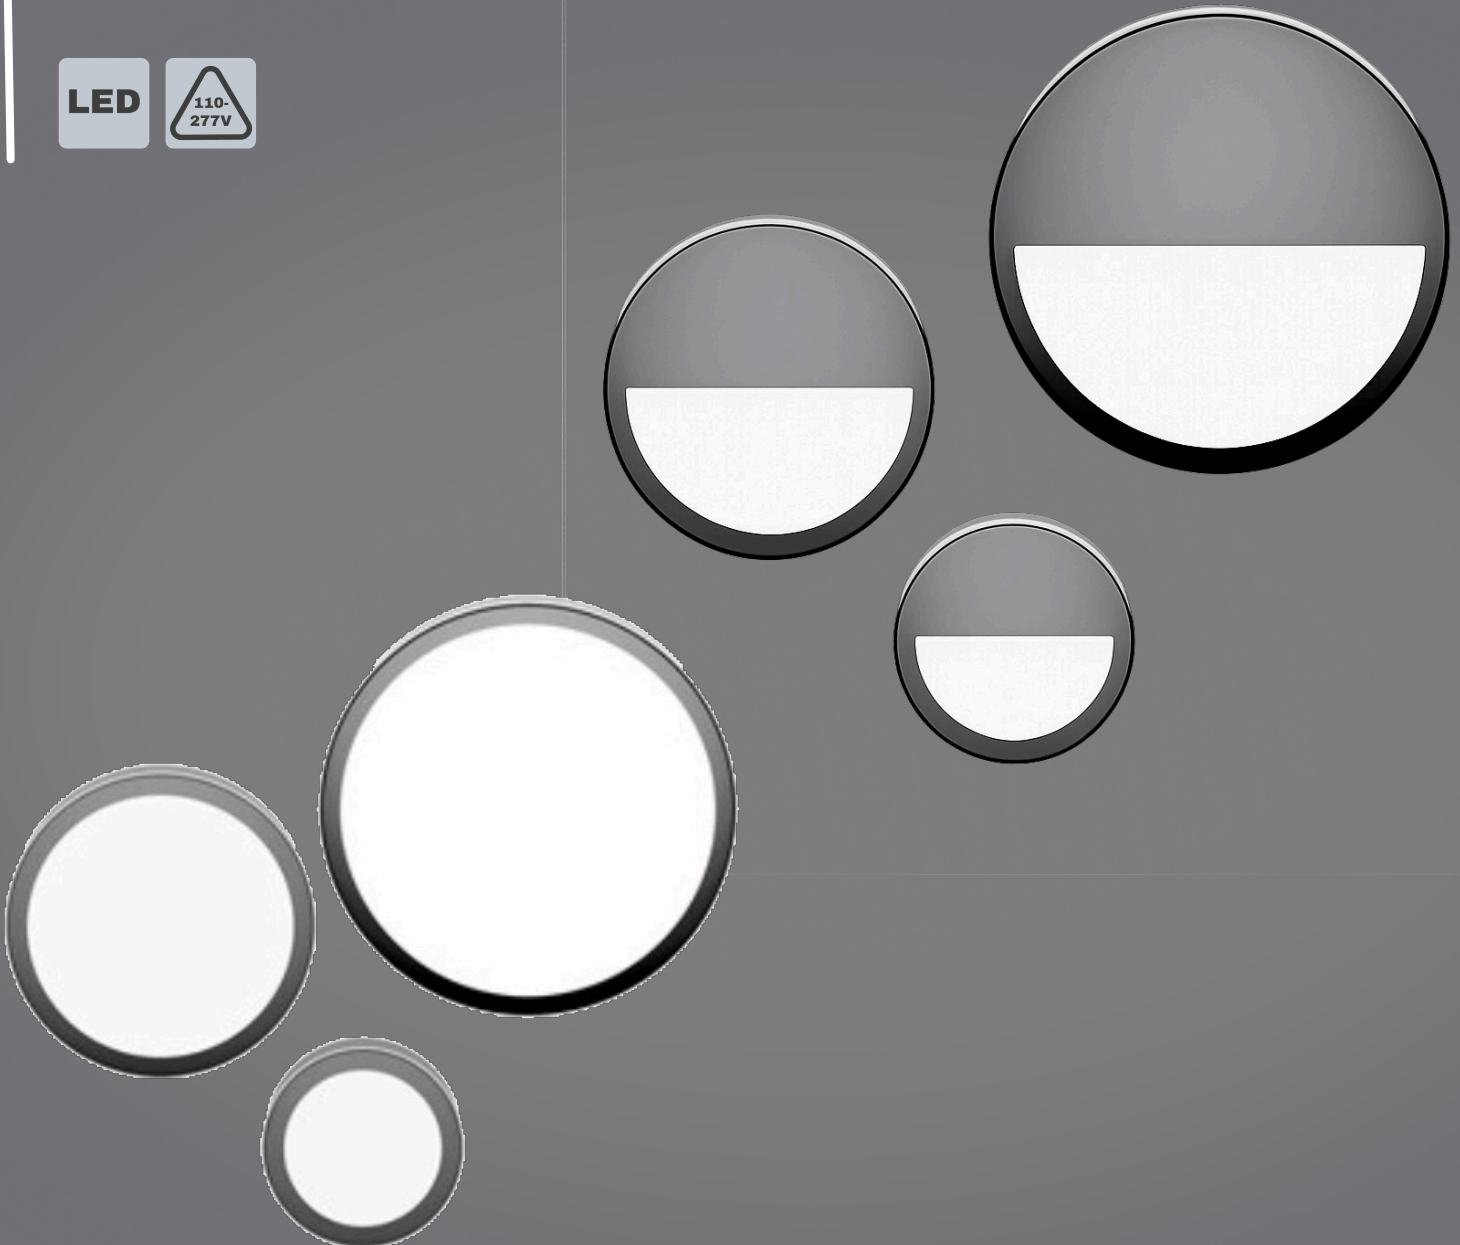



03/06/2026

**Flat Family**

Wall lamp  
 Assembling instruction  
 For technical information refer to the label on  
 the device

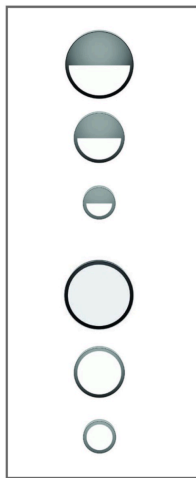


1

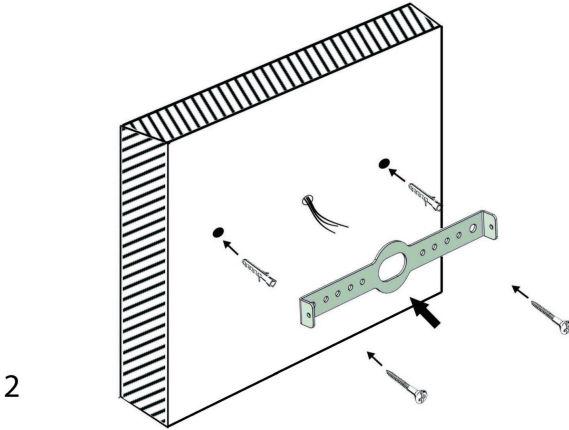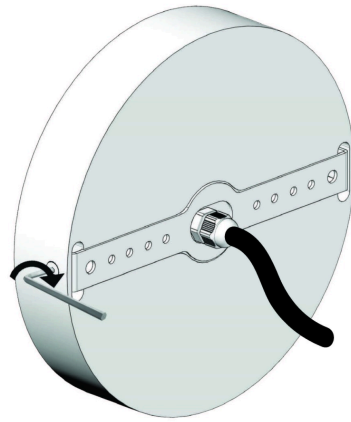


2

4


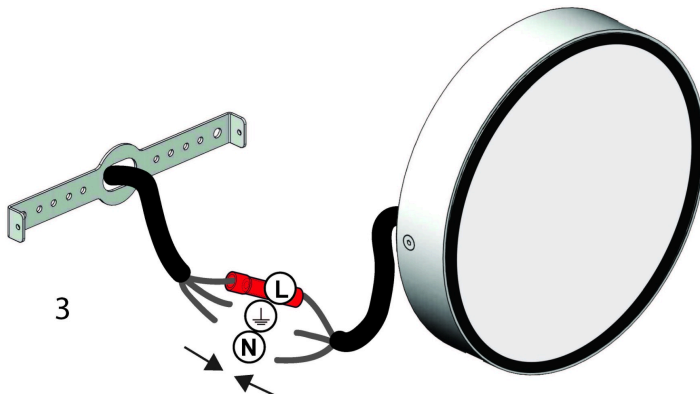


3

*Dali version*

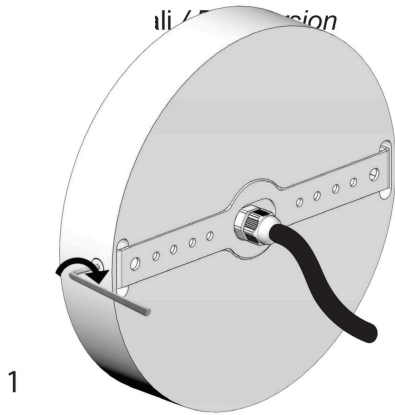

REMOTE DRIVER  
 with junction box IP 67 BOX

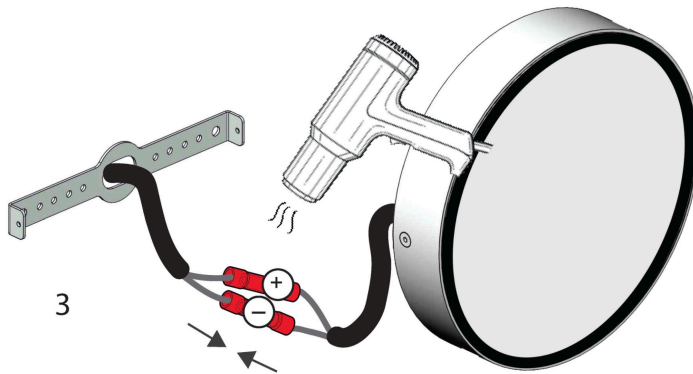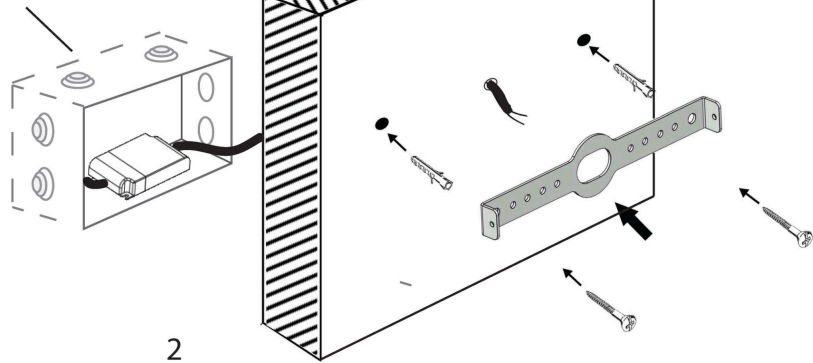



4





 






*P. 4*


[sales@gordonbullard.com](mailto:sales@gordonbullard.com)  
[www.bullardbollards.com](http://www.bullardbollards.com)  
1 877-964-4646



  991 South Gull Lake Dr.  
Richland, MI 49083  
USA

*A wall box, 503 or equivalent, is compulsory for a proper installation.*

<b>Micro flat</b>	502 spacing 6.0 cm			
				
<b>Midi flat</b>	502 spacing 6.0 cm	503 spacing 8.35 cm	504 spacing 10.85 cm	
				
<b>flat</b>	502 spacing 6.0 cm	503 spacing 8.35 cm	504 spacing 10.85 cm	505 spacing 13.2 cm
				

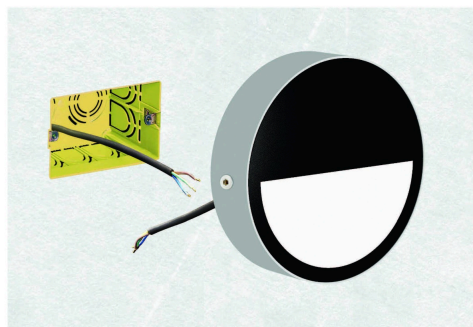

## IMPORTANT

- To ensure equipment safety you must carefully follow the instructions below. This leaflet must be kept handy by personnel entrusted with all ordinary and extraordinary maintenance.
- Before any installation or maintenance operation on the bulb, make sure it is disconnected from power.
- Fit the correct bulbs, according to the type and power indicated on the lamp data label.
- Make sure the lamp technical features are compatible with the use you are going to make of it.
- Should you have any doubt, refer to the dealer or ask an electrician.
- When connecting to the mains, follow the correct colour code for power cables: (N) blue, (L) brown or black and, only for class I equipment, (T) yellow/green.
- When lamps are to be fitted to the wall directly through their ceramic parts, fasten the fixing screws lightly, to avoid breaking the ceramic.
- To clean the lamp on the outside, use a soft cloth, possibly wet. Do not use solvents or abrasive products. No liquid must get in contact with the lamp interior parts.
- Do not touch the equipment with dirty hands.



= Class I equipment, must be connected to an earth terminal.



 
= Double insulated lamp, does not need earthing.



= Electrical equipment in class III, electrical safety guaranteed by low voltage tension, does not require grounding



= Minimum distance to be observed from all lit up objects.



= Replace immediately the safety glass, if damaged, with the original part.



= The lamp uses low pressure bulbs, and needs no protection glass.