




**BULLARD  
BOLLARDS**  
Think Bollard Think Bullard

INSTALLATION INSTRUCTION

# LUNARA FLAT RD/SQ

INSTALLATION TYPE:  
CEILING RECESSED

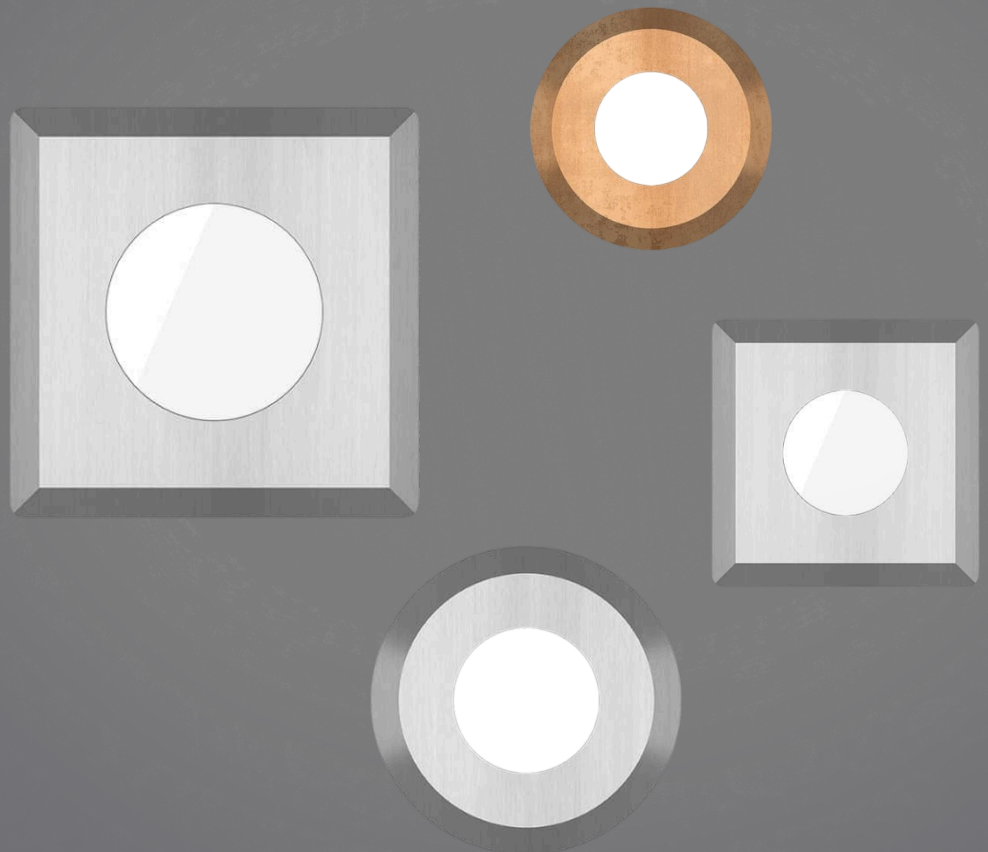

03/09/2026

RECESSED / ASSEMBLING INSTRUCTION  
 FOR TECHNICAL INFORMATION REFER TO THE LABEL ON THE DEVICE

**1B** Rough-in compatible with led driver

If water does not disappear in 30 min. you must use a further drainage system:

**FURTHER DRAINAGE SYSTEM**

Hole diameter

Model	Hole Diameter	Optional Cut	Base Diameter
AC611	30mm	25mm	120mm
AC612	40mm	25mm	120mm
AC612	50mm	25mm	120mm

CE EAC WATERLOCK

**DO NOT CONNECT WITH POWER ON**

1 OFF 2 Power supply 3 ON 1 ON 2 Power supply

ISTR0143\_REV.2 P1

**2** [Diagram showing the device being inserted into the hole]

**3** [Diagram showing the hole being filled with concrete]

**4** MIN. IP 67 CONNECTION [Diagram showing the LED driver being connected to the device]

**5** LED DRIVER [Diagram showing the LED driver being inserted into the device]

**6** [Diagram showing the final assembly being pushed down into the hole]

Only for 24V version

MIN. IP 67 CONNECTION


[sales@gordonbullard.com](mailto:sales@gordonbullard.com)  
[www.bullardbollards.com](http://www.bullardbollards.com)  
 1 877-964-4646



991 South Gull Lake Dr.  
 Richland, MI 49083  
 USA

RECESSED / ASSEMBLING INSTRUCTION  
 FOR TECHNICAL INFORMATION REFER TO THE LABEL ON THE DEVICE


**WALL RECESSED VERSION**

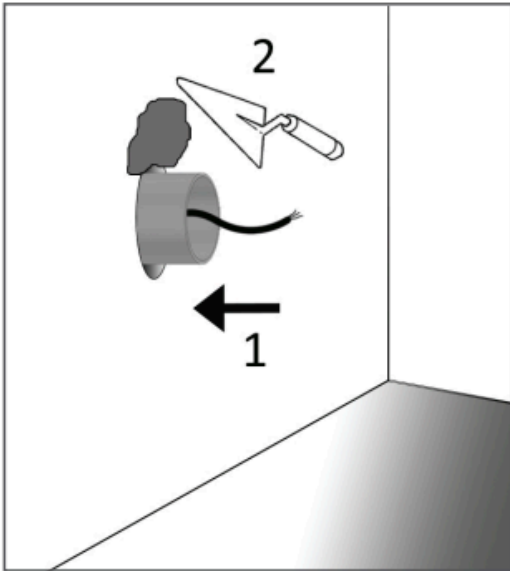

*Hole diameter*

- LUNARA RD32 -  $\varnothing > 30$  mm
- LUNARA RD45  $\varnothing > 40$  mm
- LUNARA RD55 -  $\varnothing > 50$


**CEILING RECESSED VERSION**

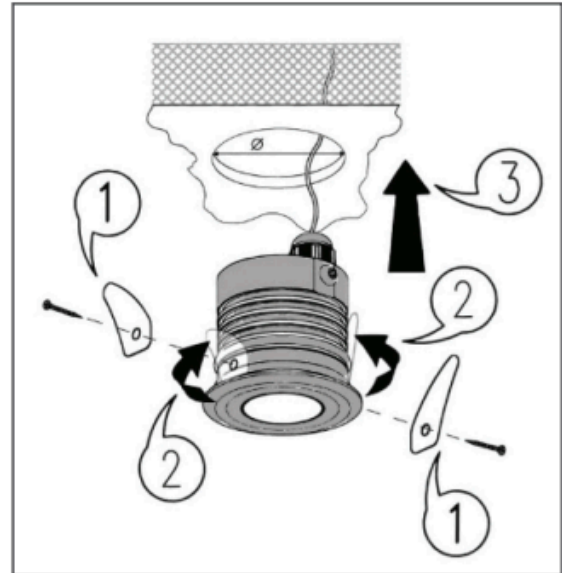


*Hole diameter*

- LUNARA RD32 -  $\varnothing > 30$  mm
- LUNARA RD45  $\varnothing > 40$  mm
- LUNARA RD55 -  $\varnothing > 50$

Connection in series:  
Constant current

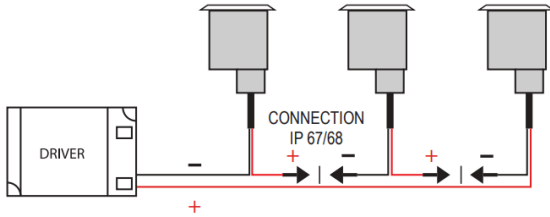

Connection in parallel:  
Constant voltage - 24 V

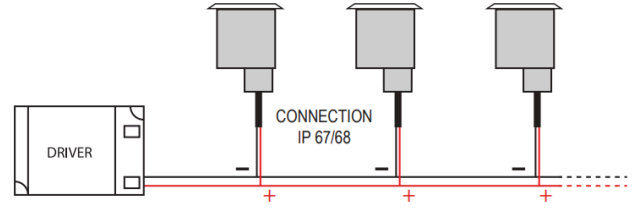

Per ulteriori informazioni sul dimensionamento del cavo e la scelta del driver contattare il servizio assistenza Ghidini.  
For more information on cable size and driver compatibility, please contact Ghidini customer service.

**IMPORTANT**

- To ensure equipment safety you must carefully follow the instructions below. This leaflet must be kept handy by personnel entrusted with all ordinary and extraordinary maintenance.
- Before any installation or maintenance operation on the bulb, make sure it is disconnected from power.
- Fit the correct bulbs, according to the type and power indicated on the lamp data label.
- Make sure the lamp technical features are compatible with the use you are going to make of it.
- Should you have any doubt, refer to the dealer or ask an electrician.
- When connecting to the mains, follow the correct colour code for power cables: (N) blue, (L) brown or black and, only for class I equipment, (T) yellow/green.
- When lamps are to be fitted to the wall directly through their ceramic parts, fasten the fixing screws lightly, to avoid breaking the ceramic.
- To clean the lamp on the outside, use a soft cloth, possibly wet. Do not use solvents or abrasive products. No liquid must get in contact with the lamp interior parts.
- Do not touch the equipment with dirty hands.



= Class I equipment, must be connected to an earth terminal.



 
= Double insulated lamp, does not need earthing.



= Electrical equipment in class III, electrical safety guaranteed by low voltage tension, does not require grounding



= Minimum distance to be observed from all lit up objects.



= Replace immediately the safety glass, if damaged, with the original part.



= The lamp uses low pressure bulbs, and needs no protection glass.