






**BULLARD
BOLLARDS**
Think Bollard Think Bullard

INSTALLATION INSTRUCTION

LUNARA RD/SQ

INSTALLATION TYPE:
CEILING RECESSED

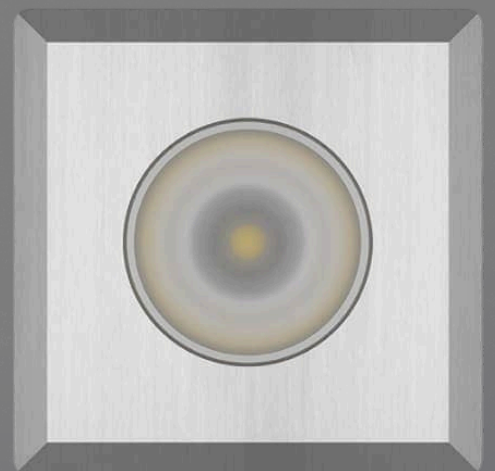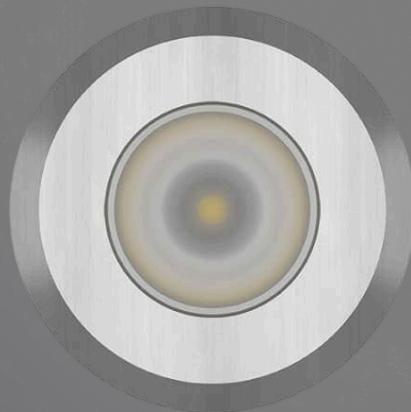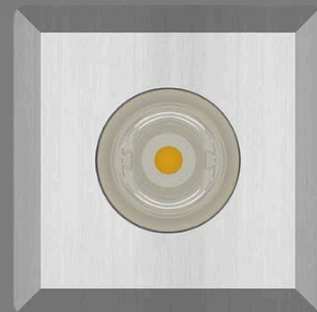

03/09/2026

RECESSED / ASSEMBLING INSTRUCTION
 FOR TECHNICAL INFORMATION REFER TO THE LABEL ON THE DEVICE

Cassaforma compatibile con alimentatore remoto ⚠ Se l'acqua non scompare in 30 min. utilizzare un sistema di drenaggio supplementare:

1B

FURTHER DRAINAGE SYSTEM

Diametri fori/ Hole diameter	AC610	AC611	AC612
	30mm	40mm	50mm
	120mm	120mm	120mm

CE
ERAC

CONNETTERE A CORRENTE DISINERITA
DO NOT CONNECT WITH POWER ON

ISTR0143_REV.2 P1

2

3

4

Only for 24V version


MIN. IP 68 CONNECTION

5

6

RECESSED / ASSEMBLING INSTRUCTION
 FOR TECHNICAL INFORMATION REFER TO THE LABEL ON THE DEVICE


WALL RECESSED VERSION

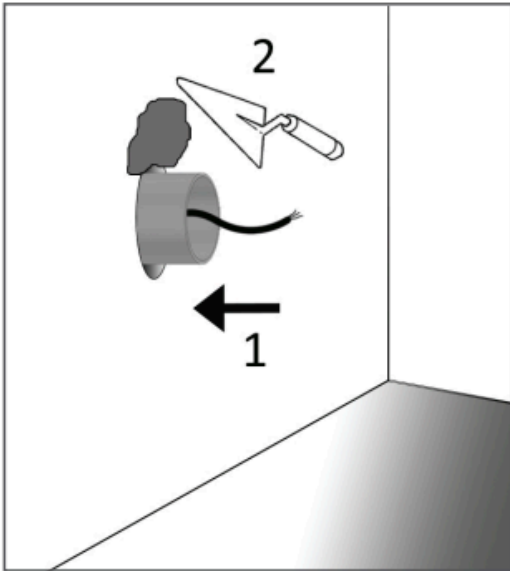

Hole diameter

- LUNARA RD32 - $\varnothing > 30$ mm
- LUNARA RD45 $\varnothing > 40$ mm
- LUNARA RD55 - $\varnothing > 50$


CEILING RECESSED VERSION

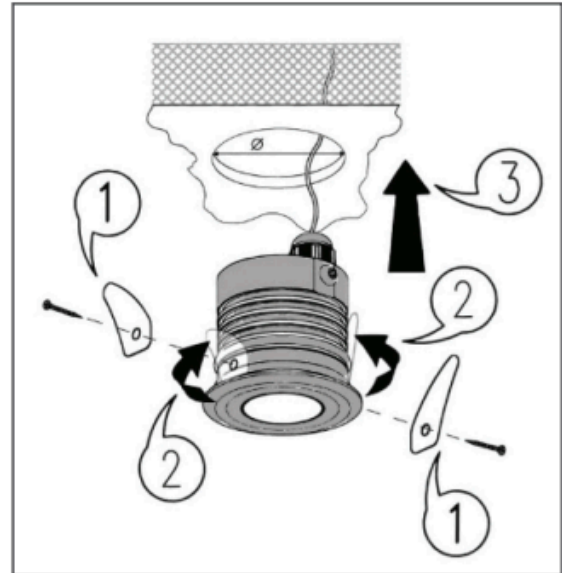


Hole diameter

- LUNARA RD32 - $\varnothing > 30$ mm
- LUNARA RD45 $\varnothing > 40$ mm
- LUNARA RD55 - $\varnothing > 50$

Connection in series:
Constant current

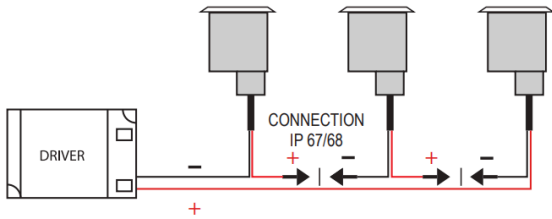

Connection in parallel:
Constant voltage - 24 V

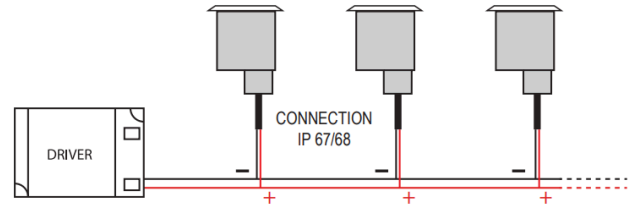

Per ulteriori informazioni sul dimensionamento del cavo e la scelta del driver contattare il servizio assistenza Ghidini.
For more information on cable size and driver compatibility, please contact Ghidini customer service.

IMPORTANT

- To ensure equipment safety you must carefully follow the instructions below. This leaflet must be kept handy by personnel entrusted with all ordinary and extraordinary maintenance.
- Before any installation or maintenance operation on the bulb, make sure it is disconnected from power.
- Fit the correct bulbs, according to the type and power indicated on the lamp data label.
- Make sure the lamp technical features are compatible with the use you are going to make of it.
- Should you have any doubt, refer to the dealer or ask an electrician.
- When connecting to the mains, follow the correct colour code for power cables: (N) blue, (L) brown or black and, only for class I equipment, (T) yellow/green.
- When lamps are to be fitted to the wall directly through their ceramic parts, fasten the fixing screws lightly, to avoid breaking the ceramic.
- To clean the lamp on the outside, use a soft cloth, possibly wet. Do not use solvents or abrasive products. No liquid must get in contact with the lamp interior parts.
- Do not touch the equipment with dirty hands.



= Class I equipment, must be connected to an earth terminal.



 
= Double insulated lamp, does not need earthing.



= Electrical equipment in class III, electrical safety guaranteed by low voltage tension, does not require grounding



= Minimum distance to be observed from all lit up objects.



= Replace immediately the safety glass, if damaged, with the original part.



= The lamp uses low pressure bulbs, and needs no protection glass.

