



**BULLARD
BOLLARDS**
Think Bollard Think Bullard

BUNNY DOT

INSTALLATION TYPE:
RECESSED

DOT-245







Class I

IP68

IK10

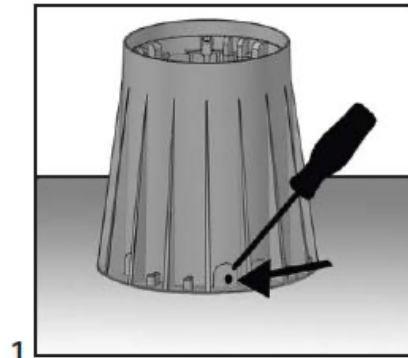


1

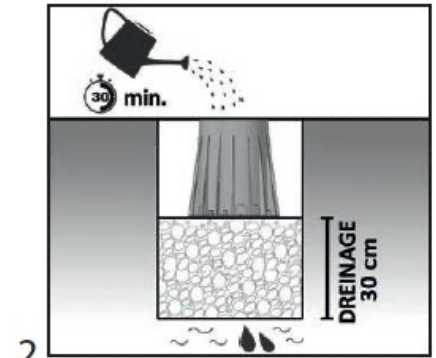


2


If water does not disappear in 30 min. you must use a further drainage system:

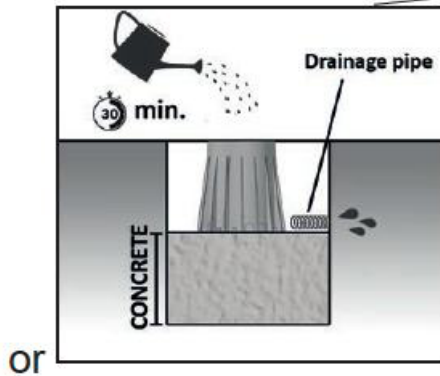


or

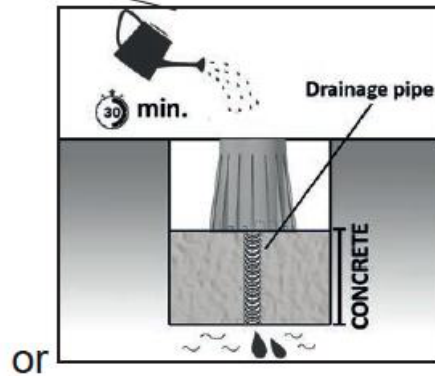


or

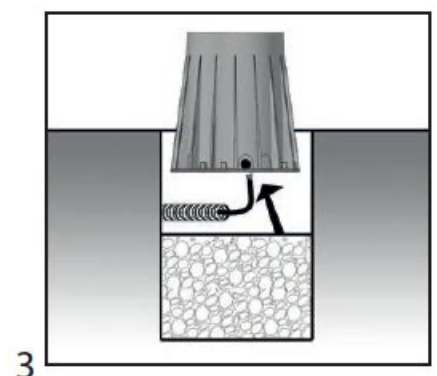

3

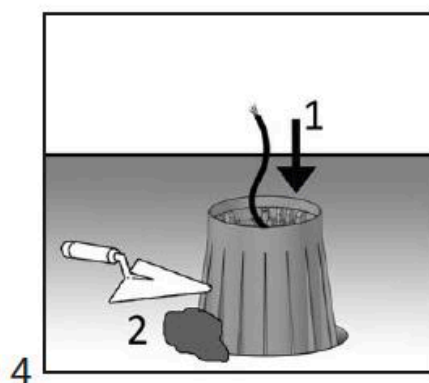

4

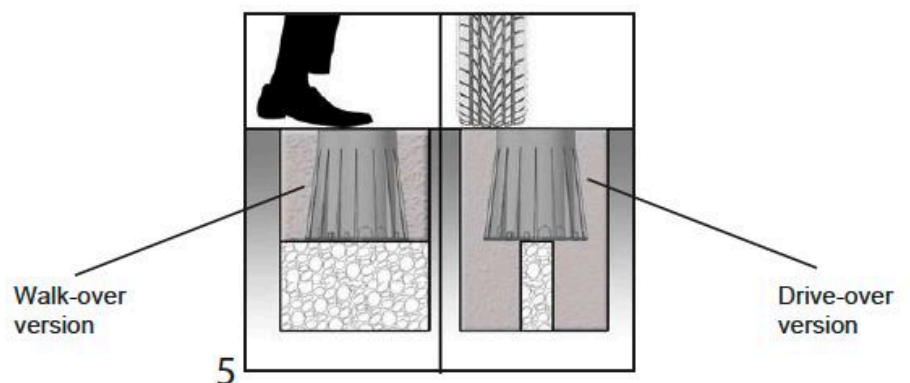


Walk-over
version

5


Drive-over
version

IP 68 CONNECTION SCHEMES:


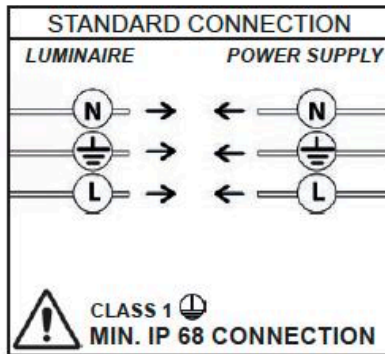


6


or

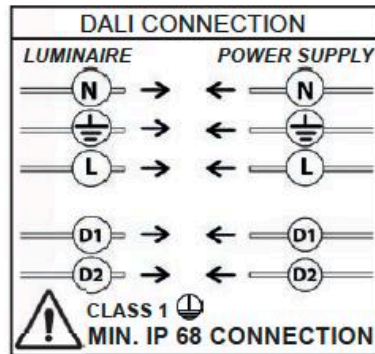


or

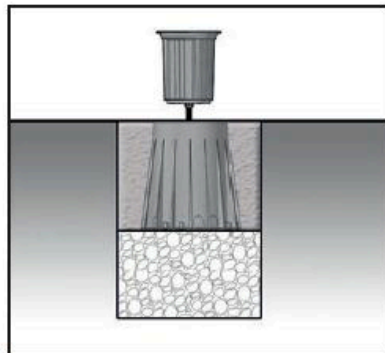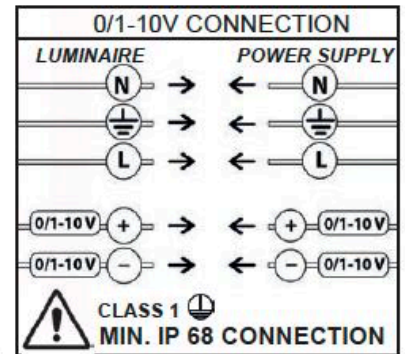


7

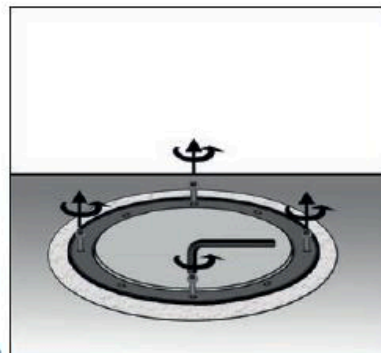


8

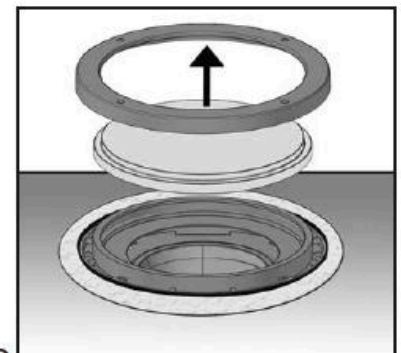


9

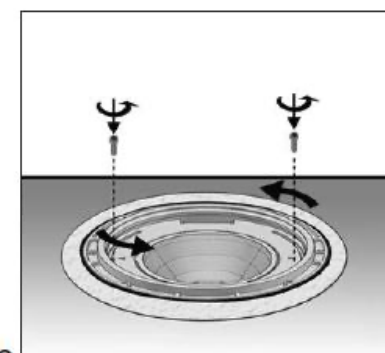

10

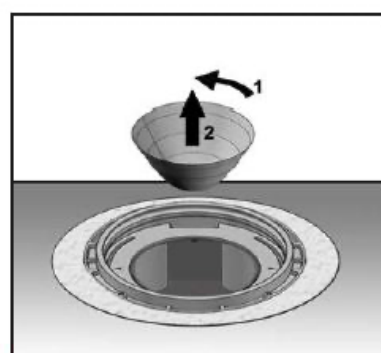

11

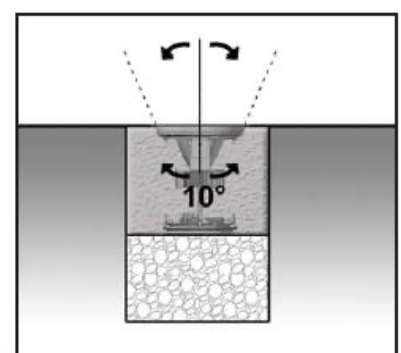


12

P.3


sales@gordonbullard.com
www.bullardbollards.com
1 877-964-4646




991 South Gull Lake Dr.
Richland, MI 49083
USA

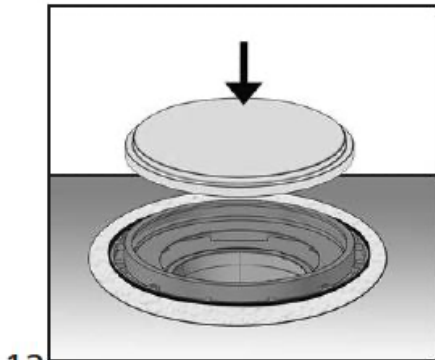


13

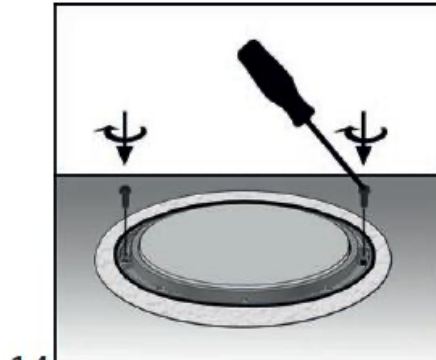


14

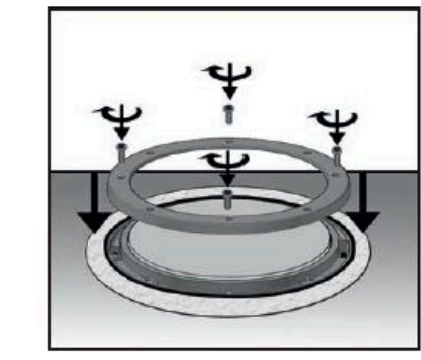

14



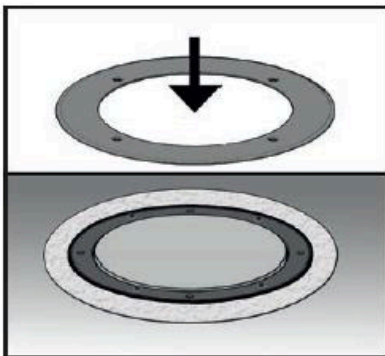


15

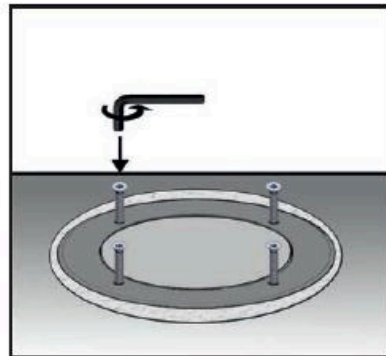

16

Standard connection (accessory connector not included)

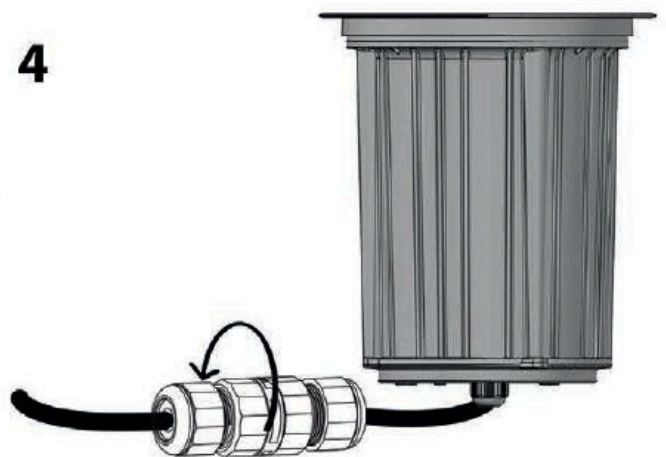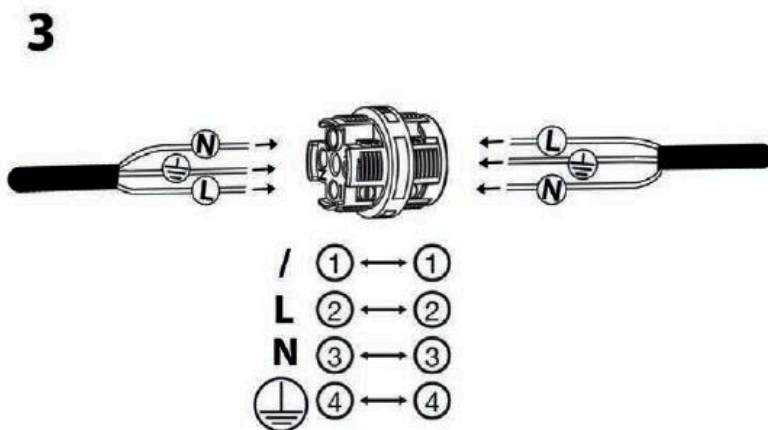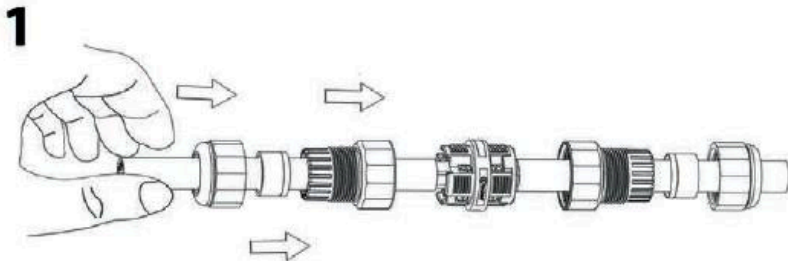


P.5

sales@gordonbullard.com
www.bullardbollards.com
1 877-964-4646



991 South Gull Lake Dr.
Richland, MI 49083
USA

Through wiring (accessory connector not included)

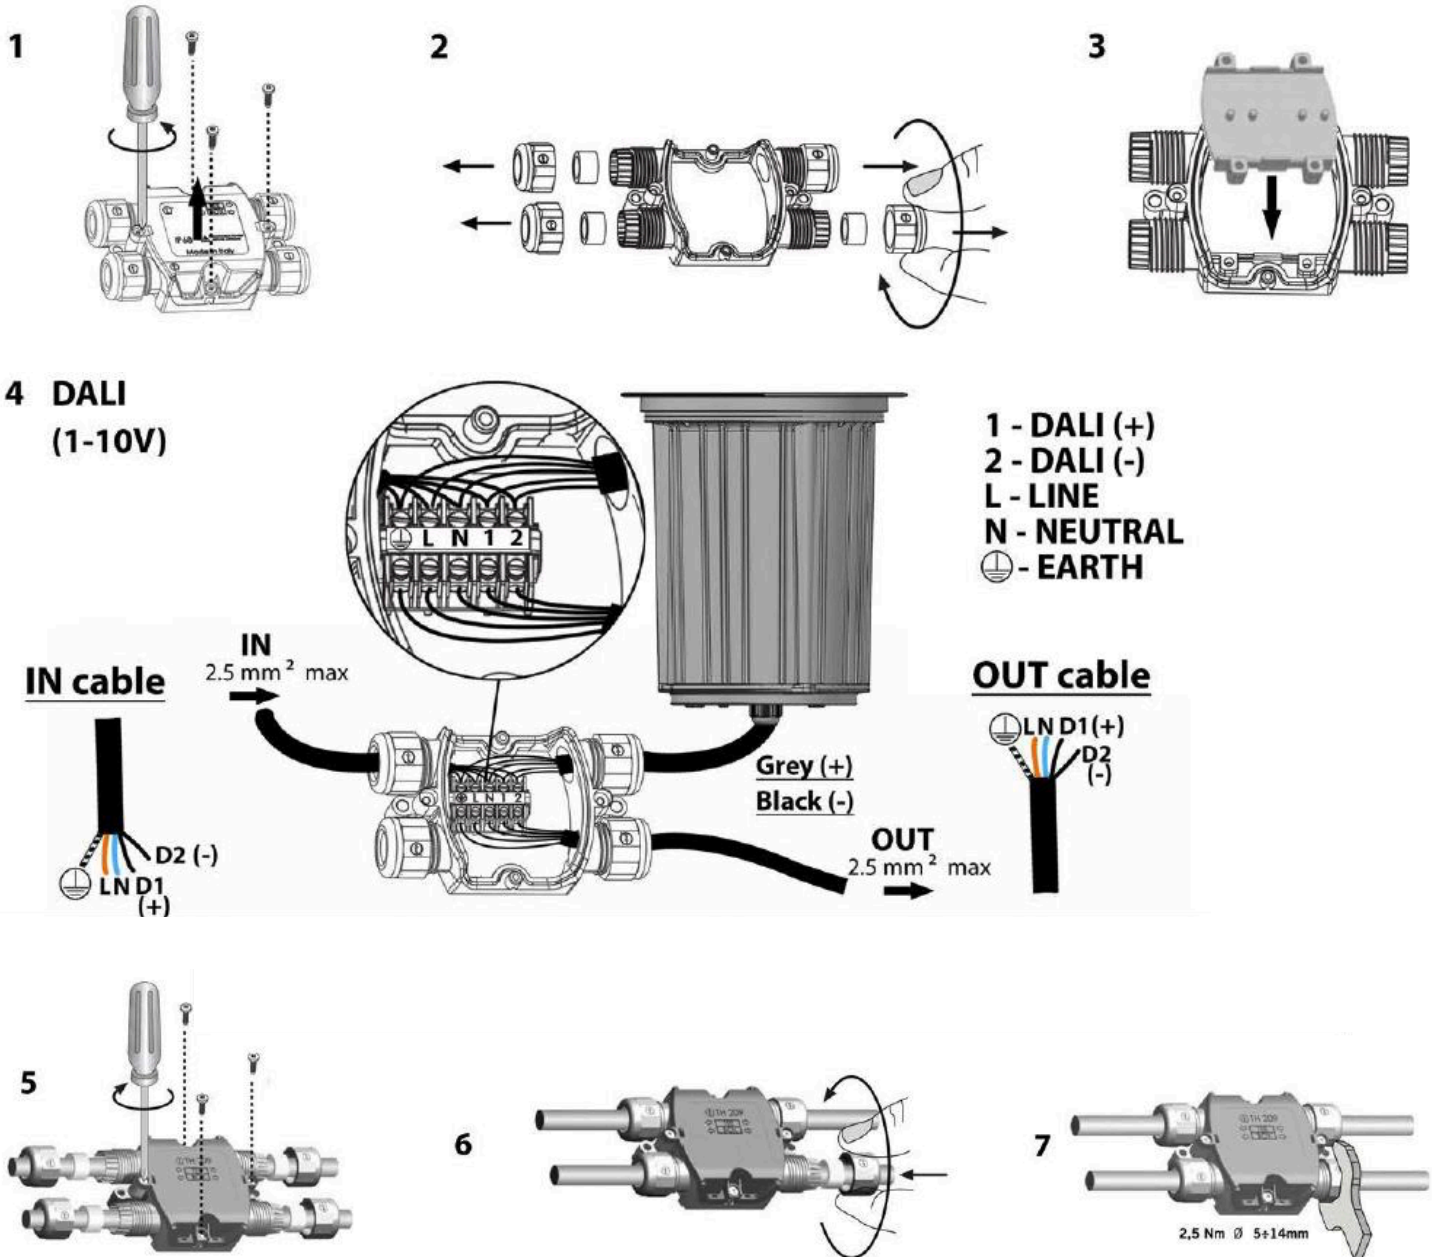

THE SAFETY OF THIS FIXTURE IS GUARANTEED ONLY IF YOU COMPLY WITH THESE INSTRUCTIONS; REMEMBER TO KEEP IN A SAFE PLACE. THE APPLIANCE MUST NOT BE TAMPERED WITH OR TRANSFORMED AND IT MUST BE INSTALLED AND USED AS SUPPLIED AND IN COMPLIANCE WITH THE NATIONAL RULES ON INSTALLATIONS. SWITCH-OFF THE POWER SUPPLY BEFORE CARRYING OUT ANY MAINTENANCE OPERATIONS. HOT PLUG-IN IS NOT ALLOW AND MAY CAUSE DAMAGE TO THE LUMINAIRE. THE LIGHT SOURCE CONTAINED IN THIS LUMINAIRE SHALL BE REPLACED ONLY BY THE MANUFACTURER OR HIS SERVICE AGENT. INSTALLATION AND SERVICE MUST BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. ANY NON-COMPLIANT INSTALLATIONS WILL INVALIDATE ALL FORMS OF GUARANTEE.

P.6

sales@gordonbullard.com
www.bullardbollards.com
1 877-964-4646



991 South Gull Lake Dr.
Richland, MI 49083
USA