



**BULLARD
BOLLARDS**
Think Bollard Think Bullard

INSTALLATION INSTRUCTION

ROSEBUD

INSTALLATION TYPE:
STANDARD GRADE



For LED replacement contact Castaldi Customer Service	Only for Class II version, see MI/2499 instructions for replacement
<p>Allowable lighting period: 30min after sunset to 30min after sunrise</p>	

	WARNING Before installation and in case of maintenance, disconnect the power
	Warning, risk of electric shock
	Replace damaged protective shields.
	Disposal as municipal waste is prohibited, separate end-of-life collection of WEEE product No. IT080100000166 is mandatory

1 Floor fixing

24Vdc Classe III

RED → +

BLACK → -

x3

By the installer

Key included

24Vdc + 24Vdc -



90°

120°

Ø 90



2 Ground fixing

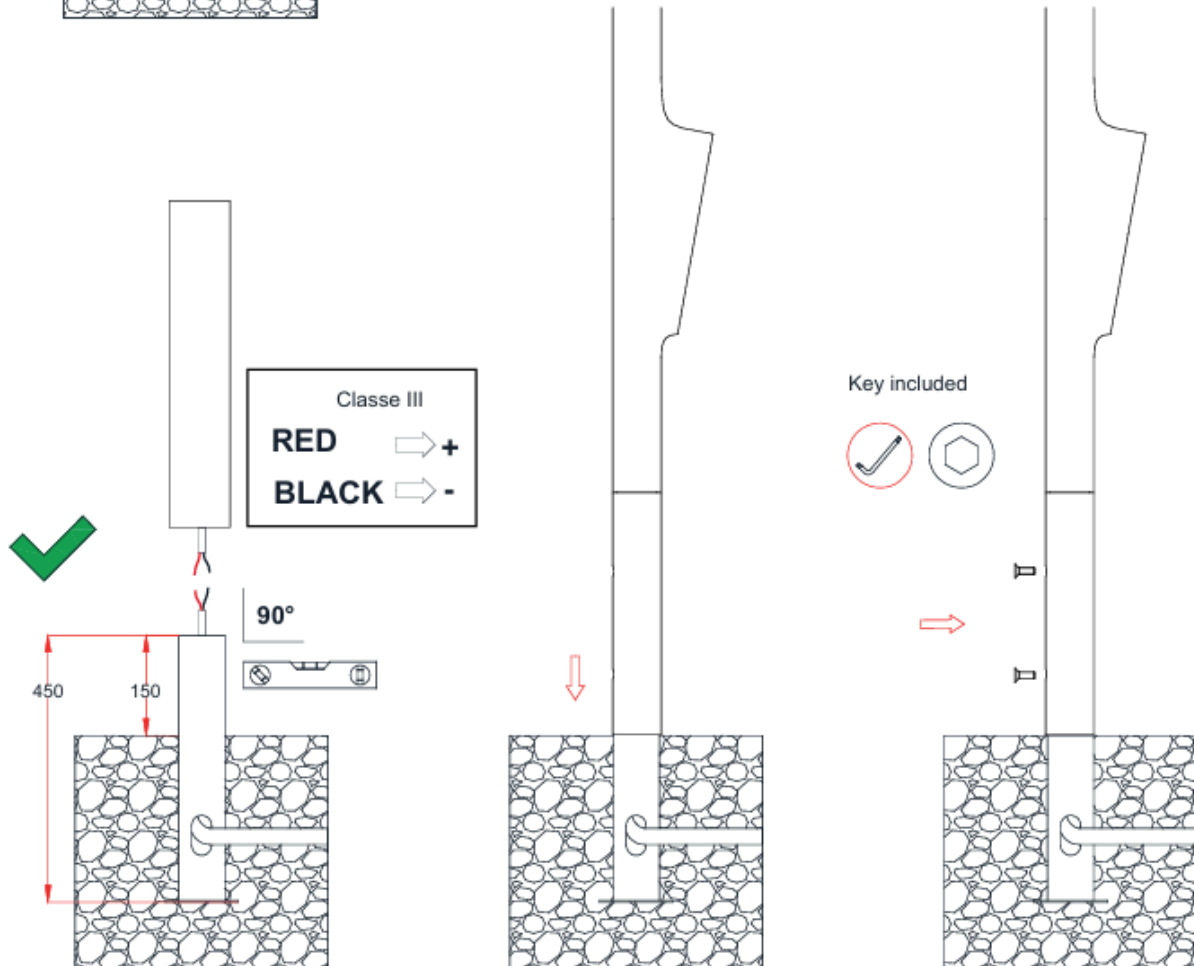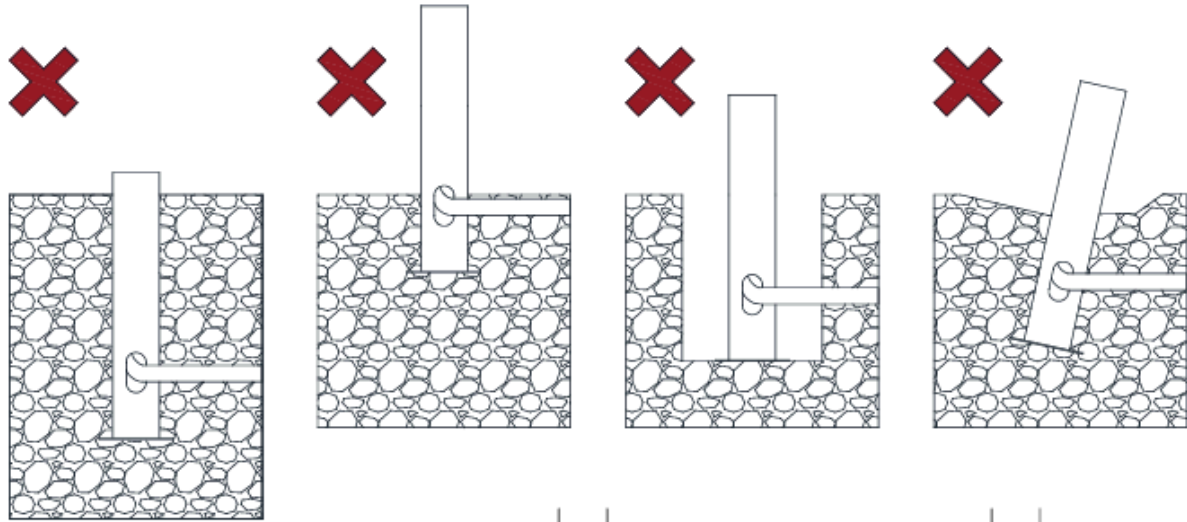

sales@gordonbullard.com
www.bullardbollards.com
 1 877-964-4646




991 South Gull Lake Dr.
 Richland, MI 49083
 USA

3 Accessories


ACS/CR17
 2P SCREW PLUG AND SOCKET CONNECTOR KIT
 D4-8 IP66/IP68/IP69



4 Multiple connections

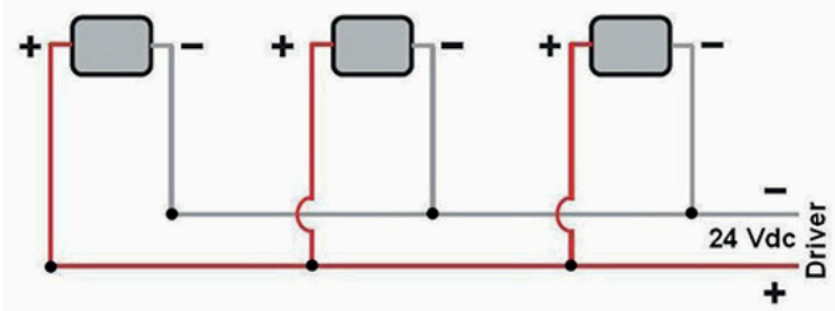

5 Orientation

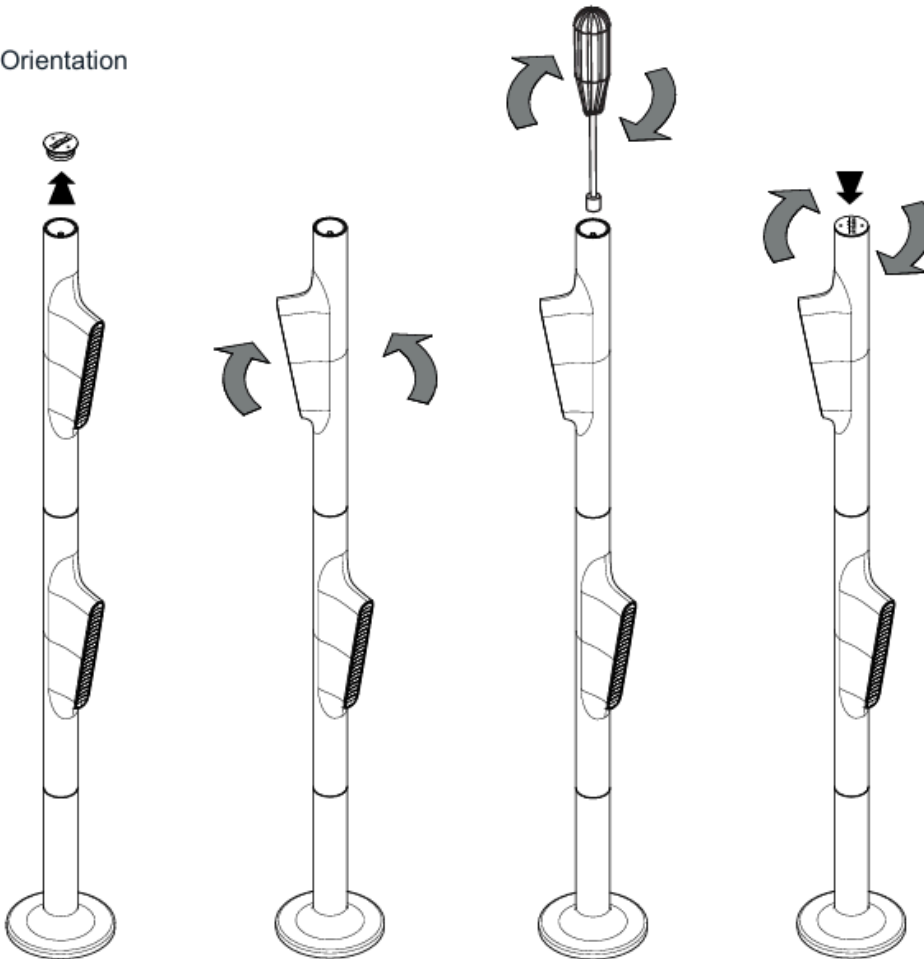

P. 4

sales@gordonbullard.com
www.bullardbollards.com
 1 877-964-4646



991 South Gull Lake Dr.
 Richland, MI 49083
 USA